

USER'S MANUAL



KMX - MG7

MasterChef

MIXER GRINDER

750W POWERFUL MOTOR
QUICK MIXING & GRINDING

Dear Customer,

Congratulations! Thank you for buying this KORYO appliance. Your new Mixer Grinder has been designed for your convenience. We are sure you will get many years of trouble free service from this appliance.

Before commissioning this device please read this user manual carefully. Please retain this user manual, warranty certificate, sales receipt and if possible carton with the inner packaging.

Contents

Safety Precautions	3
Basic Operations	3
Do's and Don'ts	4
Parts & Accessories	4
Trouble Shooting	5
E-waste Disposal	5
Warranty	6
Warranty Card	7

Safety Precautions

This product is designed and intended for household use only.

1. Read all the instructions carefully.
2. Place the Mixer Grinder on a stable flat surface.
3. Ensure that the dome is securely & tightly fitted to the jar before running the Mixer Grinder.
4. Keep the Mixer Grinder away from heat source like gas or electric stove.
5. Keep the Mixer Grinder out of reach of the children.
6. Do not bend or put excessive pressure on the power cord. Do not let the power cord hang over the edge of the table or worktop or touch any hot surface.
7. Do not operate the appliance if it malfunctions or is found damaged in any manner. Call Koryo authorized service center for repair.
8. Blades are sharp. Handle them carefully to avoid injury.
9. Do not use any attachment other than those supplied. This may cause fire, electric shock or damage the product.
10. Never touch the food in the jar by hand. Always use spatula.
11. Keep hands and utensils away from moving parts to prevent personal injury and damage to the Mixer Grinder
12. Spatula may be used to stir the ingredients only when the machine is switched OFF.
13. Do not move the Mixer Grinder during the operation
14. Never leave the Mixer Grinder unattended, while switched ON
15. Do not overfill the jars as this could damage the motor.
16. Ensure the Mixer Grinder is switched off / unplugged after each use. Do not pull the cord. Use the plug grip to unplug.
17. Do not wash the motor unit with direct running water. Use wet cloth to wipe dust or stain. The unit should be in OFF condition and unplugged while cleaning.

Basic Operations

Note:

- Initial running of the jars will throw out some oil impregnated in blades, hence it is advised to run and discard the ingredient after first use and also clean the jars thoroughly before continuous usage.
- First few runs of the motor may generate slight burnt smell. This is a common phenomenon which should not give cause for worry.

Special Tips:

- Place the Mixer-Grinder on a flat surface at a convenient height so that you can operate easily. You should be able to look down at the attachments to check circulation of the ingredients.
- Make some empty space around the unit to keep various items required while operating the Mixer-Grinder.
- The Mixer-Grinder is protected against overloading of motor. The automatic tripping mechanism (OLP) cuts off the motor in the event of motor overload.
- The overload could be due to excess ingredient in the jar or over heating of motor.
- Allow the motor to cool for 2 to 3 minutes and remove the excess ingredient and reset OLP provided at the bottom of the main unit to restart operation.

Do's and Don'ts


DO'S

1. Use the unit on a dry counter or table or stable surface with plastic sheet.
2. Ensure that the unit jar is firmly into place and locked before operating.
3. Always close jar lid for Blending / Wet Grinding / Dry Grinding.
4. Turn "OFF" unit to stir mixtures or space down the sides of jar. Use plastic spatula for this purpose.

DON'TS

1. DON'T put your hand or any utensil in the Jar / Bowl while unit is operating.
2. DON'T run the unit with an empty jar.
3. DON'T remove or replace the jar while the unit is running.
4. DON'T overload the unit. If it seems to be having difficulty in blending / grinding, processing or stops, turn the switch to "OFF" and remove the extra load.
5. DON'T blend a dry, thick or heavy mixture for more than 60 seconds without turning "OFF" the unit for blending. Allow the ingredients to stem down and then continue blending.
6. DON'T use the blending jar to beat egg.
7. DON'T attempt to blend raw meat.
8. DON'T attempt to blend large pieces of cooked meat. Always cut it into very small pieces before adding the mixture to the blending jar.
9. DON'T overfill the jar. Always leave space at the top when blending liquids. This will allow space for expansion of liquid through aeration.
10. DON'T over process. Avoid processing to maintain food texture.
11. DON'T store food in the jar.

Parts & Accessories

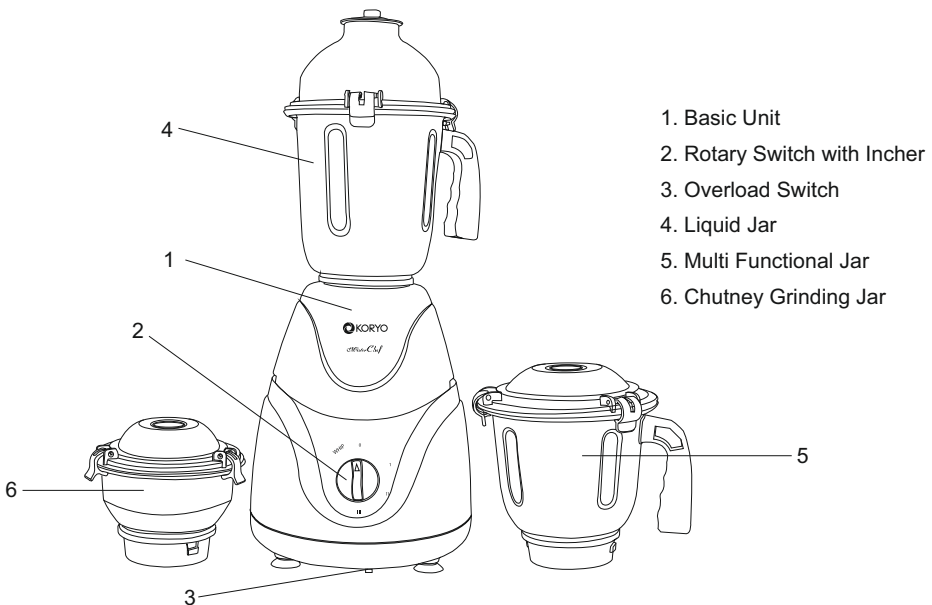

Trouble Shooting

Problem	Possible Cause	Remedy
Unit does not start	<ul style="list-style-type: none"> No power supply Plug not properly inserted Overload switch has tripped 	<ul style="list-style-type: none"> Check main supply Insert properly in socket Wait for 2-3 minutes and press the red button provided at bottom.
Unit starts but stops suddenly while operating	<ul style="list-style-type: none"> Overload switch has tripped Excess load in the jar Obstruction for the blade to rotate in the jar No power supply 	<ul style="list-style-type: none"> Switch OFF the unit. Remove the excess material from the jar. Wait for 2-3 minutes and press the red button provided at the bottom of the main unit to restart the operation. Same as above. Check the ingredients and use spatula for stirring the material. Check main supply
Abnormal noise while use	<ul style="list-style-type: none"> Jar is not engaged properly During the wet grinding the blade rotates without cutting the ingredient Jar coupler is loose Blade shaft / jar bush worn out 	<ul style="list-style-type: none"> Fix the jar properly / lock Switch OFF the unit, stir the contents by the spatula & add some water, then start Tighten the coupler & use Contact Koryo authorized service center.
Jar overflows	<ul style="list-style-type: none"> Lid & lid ring not fitted properly Excess liquid 	<ul style="list-style-type: none"> Fit properly. If required replace the lid ring Remove the excess liquid
Jar leakage at the coupler	<ul style="list-style-type: none"> Blade shaft / jar bush worn out 	<ul style="list-style-type: none"> Contact Koryo authorized service center.
Over heating of unit	<ul style="list-style-type: none"> Low voltage Over loading Ventilation blocked External heat source 	<ul style="list-style-type: none"> Operate between 200V to 240V, 50Hz Avoid adding excess material to the jar Clear the vents using dry brush Place the unit away from heat source
Unit smells	<ul style="list-style-type: none"> Motor burnt 	<ul style="list-style-type: none"> Contact Koryo authorized service center.
Problems not listed	-----	<ul style="list-style-type: none"> Contact Koryo authorized service center.

E-waste Disposal

This symbol on the product or on the container indicates that this product cannot be treated as general waste. The user is responsible for disposing this kind of waste by throwing them away at a "recycling point" specifically for electrical and electronic waste. Selective collection and electrical equipment recycling contribute to preserve natural resources and warrant waste recycling to protect environment and health.



For the purpose of recycling to facilitate effective utilization of resources, please return this product to a nearby authorized collection center, registered dismantler, recycler, service center when disposing of this product.

In case of further assistance please visit our website www.koryoworld.com or write to feedback@koryoworld.com for further information on authorized collection centers.

संसाधनों का प्रभावी उपयोग सुगम बनाने हेतु पुनः चक्रण के प्रयोजन से इस उत्पाद को कृपया निकटवर्ती अधिकृत संग्रहण केंद्र, पंजीकृत भंजक या रिसाइकिलर (पुनः चक्रणकर्ता) को वापस करें।

संग्रहण केंद्रों इत्यादि के बारे में अधिक जानकारी के लिए कृपया कंपनी की वेबसाइट www.koryoworld.com देखें या लिखें feedback@koryoworld.com

Warranty

This product comes with a warranty of 24 months from the date of purchase as specified on the warranty card.

This is against all defective material or workmanship. In the event of a defect, Future Retail Limited or KORYO Authorized Service Centre undertakes to repair the set, free of charge, during the warranty period.

In the event of a defect developing in the product, contact KORYO Customer Care or KORYO Authorized Service Centre and provide information about the defect, the model number and serial number of the product.

THIS WARRANTY IS VOID IF

1. The completely filled warranty card or invoice is not presented to the authorised personnel at the time of servicing of the product.
2. The product is not operated according to the instructions given in the user manual.
3. Defects are caused by improper or reckless use.
4. Modifications or alterations have been made to the product or if the product has been tampered with, in any manner whatsoever.
5. Repairs to the product are carried out by anyone other than an authorised company representative.
6. For defects other than faulty parts or workmanship such as damage due to lightning, abnormal voltage, spillages, dust, accidental damage, etc.
7. The serial number is deleted or altered.
8. Used for any non-domestic purpose.

OTHER TERMS AND CONDITIONS

1. Repair or replacement will be carried out either by Future Retail Limited Or Koryo Authorized Service Centre.
2. All expenses incurred in dropping and collecting the unit(s) or part(s) thereof from the Customer Service Centre, as well as any other expenses and incidentals will be borne by the customer.
3. Whilst the company will make every effort to carry out repairs at the earliest, it is made expressly clear that the company is under no obligation to do so in a specified period of time.
4. The company or its authorised customer centre reserves the right to retain any part(s) or component(s) replaced at its discretion, in the event of a defect being noticed in the equipment during the warranty
5. The warranty period starts from the date of purchase from our authorised dealers / stores only.
6. The warranty shall not apply on breakage or/and damage of Ceramic Body Parts, Plastic Parts, Plastic Body, Handles, Coupler, Blade, Lid, Bezel, Mount, Stand.
7. Parts Repairs or Replaced under this warranty are warranted only for the remainder of original warranty period, i.e., no fresh warranty period shall commence for the said replaced/repared part.
8. This product carries a Bring-In warranty, which means that the customer needs to carry the unit to the near-by Koryo authorized service center for further repair.
9. Please contact Koryo customer care to know the details of Koryo authorized service centers.
10. The decision of company is final and binding on all matters out of this warranty.
11. Any dispute arising out of this warranty shall be subject to Mumbai jurisdiction only. Any notices to be given to the provision of this warranty shall be marked to the address mentioned in the booklet.

Warranty Card

WARRANTY CARD

THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY,
SIGNED AND STAMPED BY THE DEALER ON DATE OF PURCHASE

MODEL NO : _____ SERIAL NO : _____

CUSTOMER NAME : _____

ADDRESS : _____

PHONE NO : RESIDENCE : _____ OFFICE : _____

INVOICE/CASH BILL NO : _____

DATE OF PURCHASE : _____

CUSTOMER SIGNATURE : _____

DEALER'S STAMP

*For Service request kindly Contact Customer Care Centre at : 080-26577722, 1800-425-7722

*Please mail in queries to feedback@koryoworld.com



Also Available

Microwave Ovens
Oven Toaster Grillers (OTG)
Pop-Up Toasters
Sandwich Makers
Induction Cook-Tops
Electric Cookers
Coffee/Tea Makers
Hand Blenders
Rechargeable Fans
Hair Dryers
Ceiling Fans

Slow Juicer
Juicer Mixer Grinders
Mixer Grinders
Juice Extractors
Food Processors
Food Steamer
Choppers
Steam Irons
Dry Irons
LED TVs
Table Fans

Split Air Conditioners
Window Conditioners
Storage Water Heaters
Instant Water Heaters
Immersion Heater
Room Heaters
Vacuum Cleaners
Washing Machines
Emergency Lights
Stabilizers

